


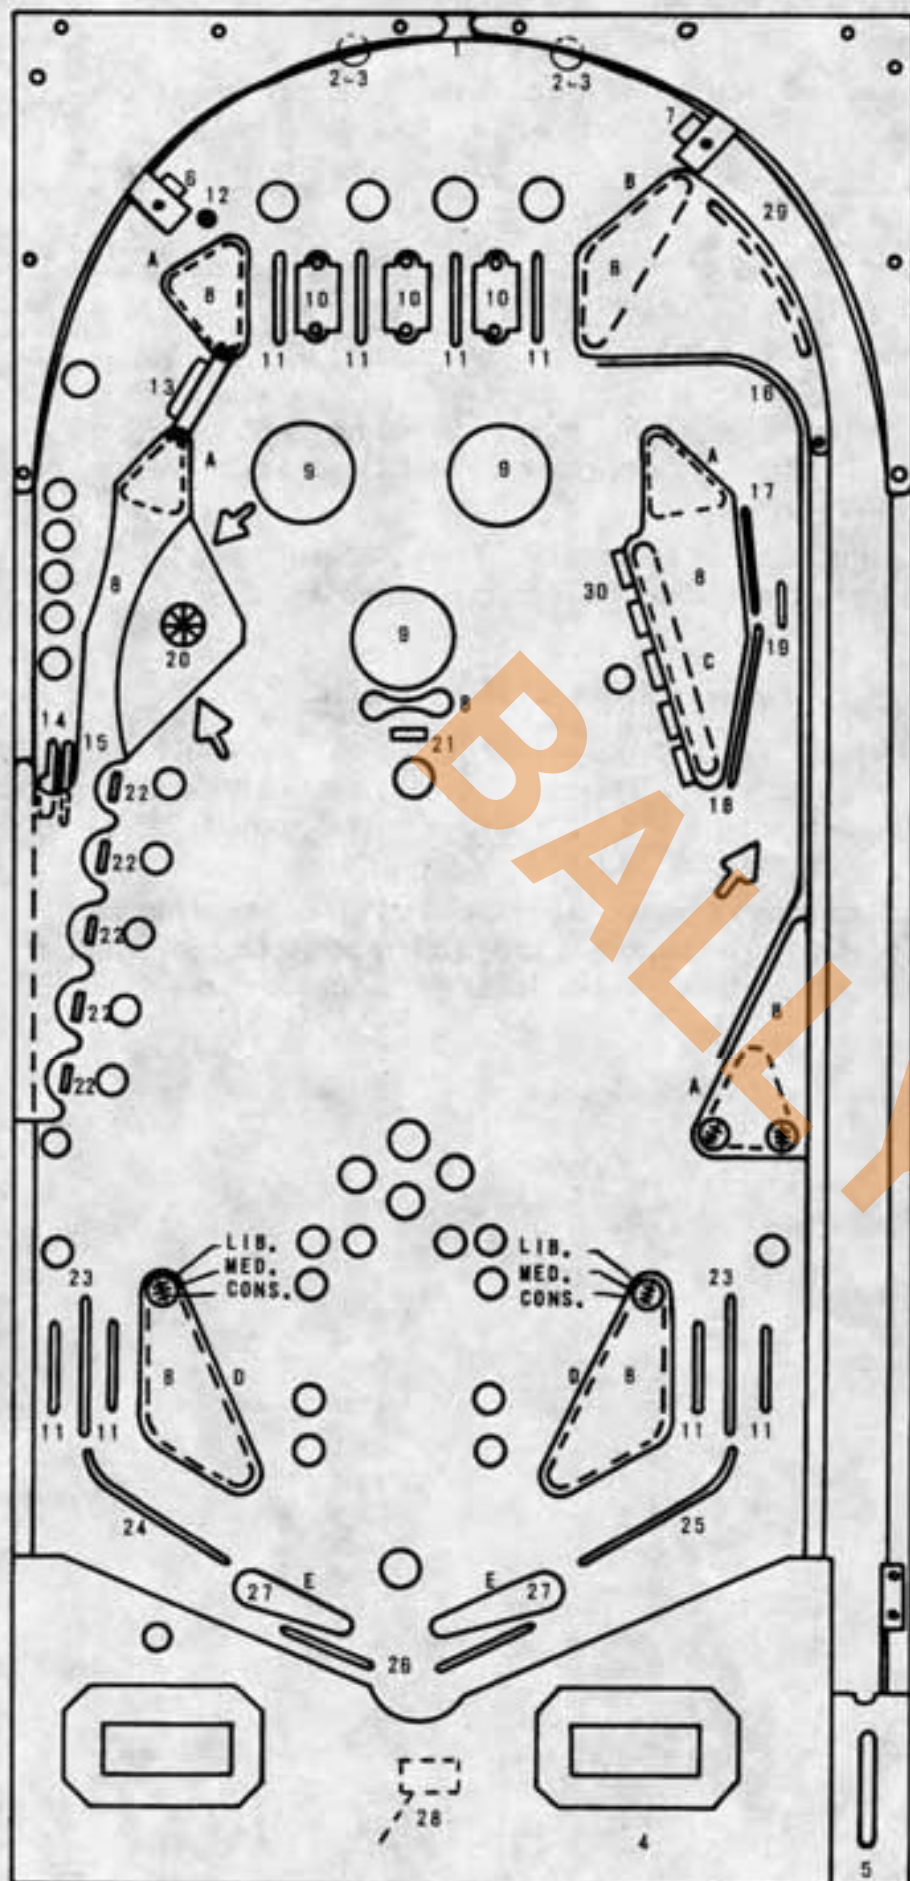

#1116-E PLAYBOY

RUBBER PARTS

A. R-521-2	1 1/2" Dia.	(4)
B. R-521-3	2" Dia.	(1)
C. R-521-5	3" Dia.	(2)
D. R-521-4	2 1/2" Dia.	(2)
E. R-406-3	Flipper	(2)
F. R-243	5/16" Dia.	(15)

PANEL TOP PARTS

1. Arch Rail	M-1774	
2. Rail Post	C-907	(2)
3. Rail Post Cap	C-908	(2)
4. Bottom Arch	P-5871-62	
5. Shooter Gauge	P-6359-28	
6. Ball Gate (L)	A-1475-12	
7. Ball Gate (R)	A-1475-13	
8. Screened Plastics (set)	A-2890-129	
9. Thumper Cap	A-3713-42	(3)
10. Plastic Guides	C-935-5	(3)
11. R.O. Wire & Bracket	ASE-2806	(8)
12. Minipost & Rubber	ASE-2836-1	
13. Ball Gate Assembly	ASE-2250-25	
14. R.O. Wire & Bracket	ASE-2806-25	
15. Ball Guide	M-121-24	
16. Guide Rail Assembly	A-3032-24	
17. Ball Guide	M-121-65	
18. Ball Guide	M-121-30	
19. R.O. Wire & Bracket	ASE-2806-24	
20. R.O. Button	C-900	
21. Target Assembly (Red)	ASE-2911-3	
22. Target Assembly (White)	ASE-2911-20	(5)
23. Ball Guide	M-121-18	(2)
24. Ball Guide	M-121-43	
25. Ball Guide	M-121-44	
26. Buffer Wire	M-121-53	(2)
27. Flipper & Shaft	ASE-2214-24	(2)
28. Outhole Wire Assembly	ASE-2806-21	
29. Ball Guide	M-121-25	
30. Drop Target Assembly	ASE-2795-58	

CONS.—CONSERVATIVE

MED.—MEDIUM

LIB.—LIBERAL

INDICATES MOVABLE POSTS
FOR SCORING ADJUSTMENTS

FIGURE II